


Installation Instruction


Main Components:

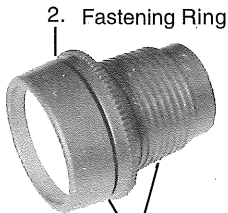

2. Fastening Ring

1. Viewer Body

3. Cover and Prism Casing

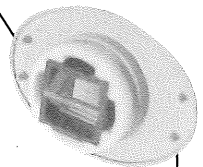

4. Spike x 4

Installation Steps:

1. Put the sticker label on the door at a desired place where the door viewer is to be positioned. Be sure that the label is stuck on the outside of the door and is kept horizontal with reference to the level line given on the label. Drill a hole with its center indicated on the sticker label by using the hole saw. And then make four 5mm-deep small holes with positions marked on the label by using a 3mm-diameter nail (see Figure 1).
2. Turn the component 3 counterclockwise till it is off the viewer body and cover the hole with the component 3 from outside your door. Make sure it is at the central position of the hole and the oval cover on the component 3 is horizontal. A pressure is then made to force the spikes into the wooden surface of the door (see Figure 2).
3. Put the components 1 and 2 into the hole from inside your door and turn them clockwise till they are firmly connected to the component 3 on the other side of the door. Turn the component 2 clockwise to fasten this door viewer and the door together (see Figure 3).

Outside of Door

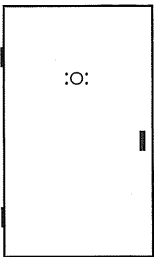


Figure 1


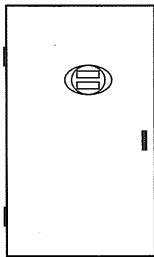


Figure 2

Inside of Door

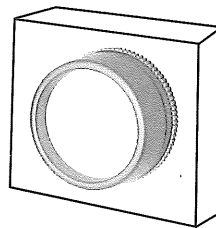

Outside of Door

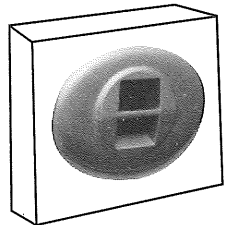


Figure 3